

# MD100+ Firmware Update Instructions

Applies to: MD100+ BLUE and MD100+ GOLD with NV201 and NV201S (Spectral) head units

Time to complete task – 10 to 20 Mins

## Parts required:

- USB Update: NAU008
- USB Cable
  - MD100 Blue - USB “A” to “B”
  - MD100 Gold - USB “A” to “Micro” (should be already fitted to machine as standard)

## Please ensure MD100 is in full working order before starting update

1. Enter the test routines.
2. Navigate to the USB update screen (More tests > Machine set up > Next page > Next page > Next page)
3. Plug the update USB in.  
(If there are no spare USB ports on the Quixant remove the dongle and use that port)
4. For MD100 Blue plug the supplied right-angled USB lead into the front of the MD100 and PC as shown below (MD100 Gold should already have this fitted, check that it is plugged in both ends)
5. If you have fitted a USB lead place the lead in the cable retainer on the side of the coin mech housing as shown below, run the cable around the back of the machine and into a spare USB port.



Plug the right-angled end of USB cable in here.

Tie cable in here


6. Press “USB Update” and follow the instructions displayed on screen when prompted.
7. Ensure dongle is re-fitted to machine if you removed it earlier.

## Troubleshooting

To swap the units between SSP and Operation mode you press and hold the red button on the front of the unit until the button lights up (approximately 3 seconds)



MD100 Blue

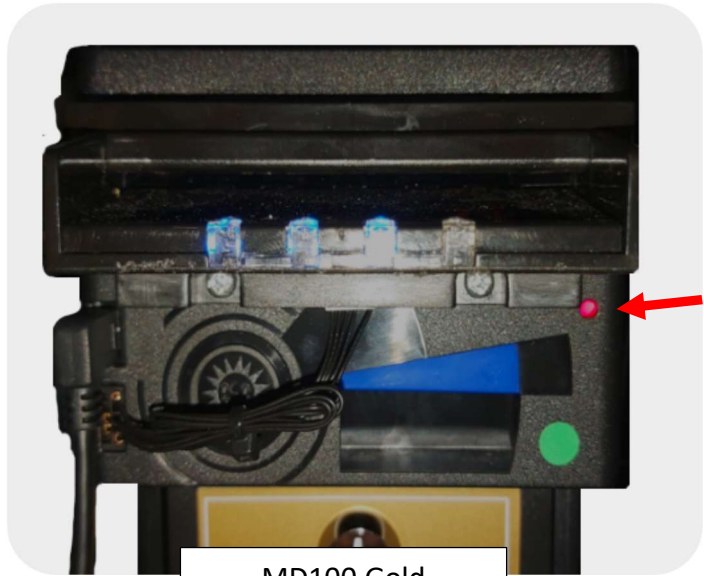

MD100 Gold

You can check the current mode of the MD100 unit by double tapping the red button. It will then flash a number of times to indicate what mode it is currently in.

**One flash - SSP programming mode**

**Three flashes - OPERATION mode**

If the update fails it will automatically retry. If it continues to fail, re-seat the stacker/cashbox and wait for the unit to re-initialise before trying again.